

INSTANT SHELTERS

www.surfturf.co.uk

SET-UP INSTRUCTIONS FOR 2.2M AND 3M HEAVY DUTY AND COMMERCIAL MARQUEES

Pre Set Up

Read the whole instruction manual before proceeding and then follow this step by step guide.

If being used for the first time make sure all four sliding joints on legs are properly lubricated so they slide effortlessly upwards while opening the whole structure(fig.1).

We recommend that the lubricant is applied in sufficient volume in the narrow gap between the leg and the joint on all four sides of the joint to keep friction to a minimum.

Remove black plastic cap in the top centre of the framework(fig.2).

Open the frame to approximately two thirds of its spread.

Open and place the canopy over the frame.

Locate its centre where the seams meet, refit the plastic cap through the hole in the top of the cover and attach it back to the frame from where it was removed.

Now locate the corners of the canopy and attach them to the top part of legs where the velcro strip is stitched to the inside of the top.

From now on the canopy may stay permanently attached.

Should it be transported in horizontal position it is recommended to take it off after every use to prevent damage.

Do not use force and make sure the framework doesn't bend during erecting.

Should you feel the framework is difficult to open, stop immediately and make sure it is not jammed at any point.



Fig. 1



Fig.2

Step 1

Place the marquee in the centre of the set-up area.

Roll at least two corners of the canopy up and off the top of the leg they're attached to(fig.3)


With a partner opposite you, take hold of the bottom part of the side section of the frame and lift slightly off the ground(fig.4).

Take a few steps backwards while spreading your arms at the same time until the frame is extended to approx. 6 feet.



Fig. 3

Fig. 4

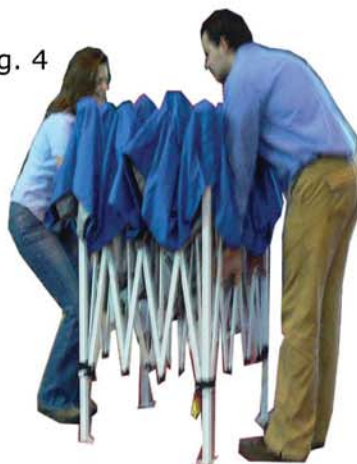

Step 2

Move into the middle of the marquee underneath the canopy and grip two opposite roof bars in their middle where an extended bolt is situated and push upwards(fig.5). Repeat the same with the other two.

This should lever the sliding corner joints higher until they automatically locate in position(fig.6).

Your frame is fitted with eight storm bars (two hanging down on each side) to give it extra stability.

To fix into place lift and slot them onto the extended bolts(fig.7).

Roll the corners of the canopy back down over the top of the leg and pull tight.



Fig.5



Fig. 6



Fig. 7

Step 3

With your partner take hold of two legs on the same side, lift the whole structure up and pull out the inner part of the legs until the buttons pop out through the adjustment holes(fig.8).

Repeat the same with the remaining two legs.



Fig. 8

To take the marquee down repeat the whole procedure in reverse order.

Do not forget to release the corner sliding joints and unhook the storm bars before closing the frame!



Tel : 0161 776 9923 Fax: 0161 776 2820 Email: info@surfturf.co.uk